


## Parts and their location in a BC60/8 steering valve

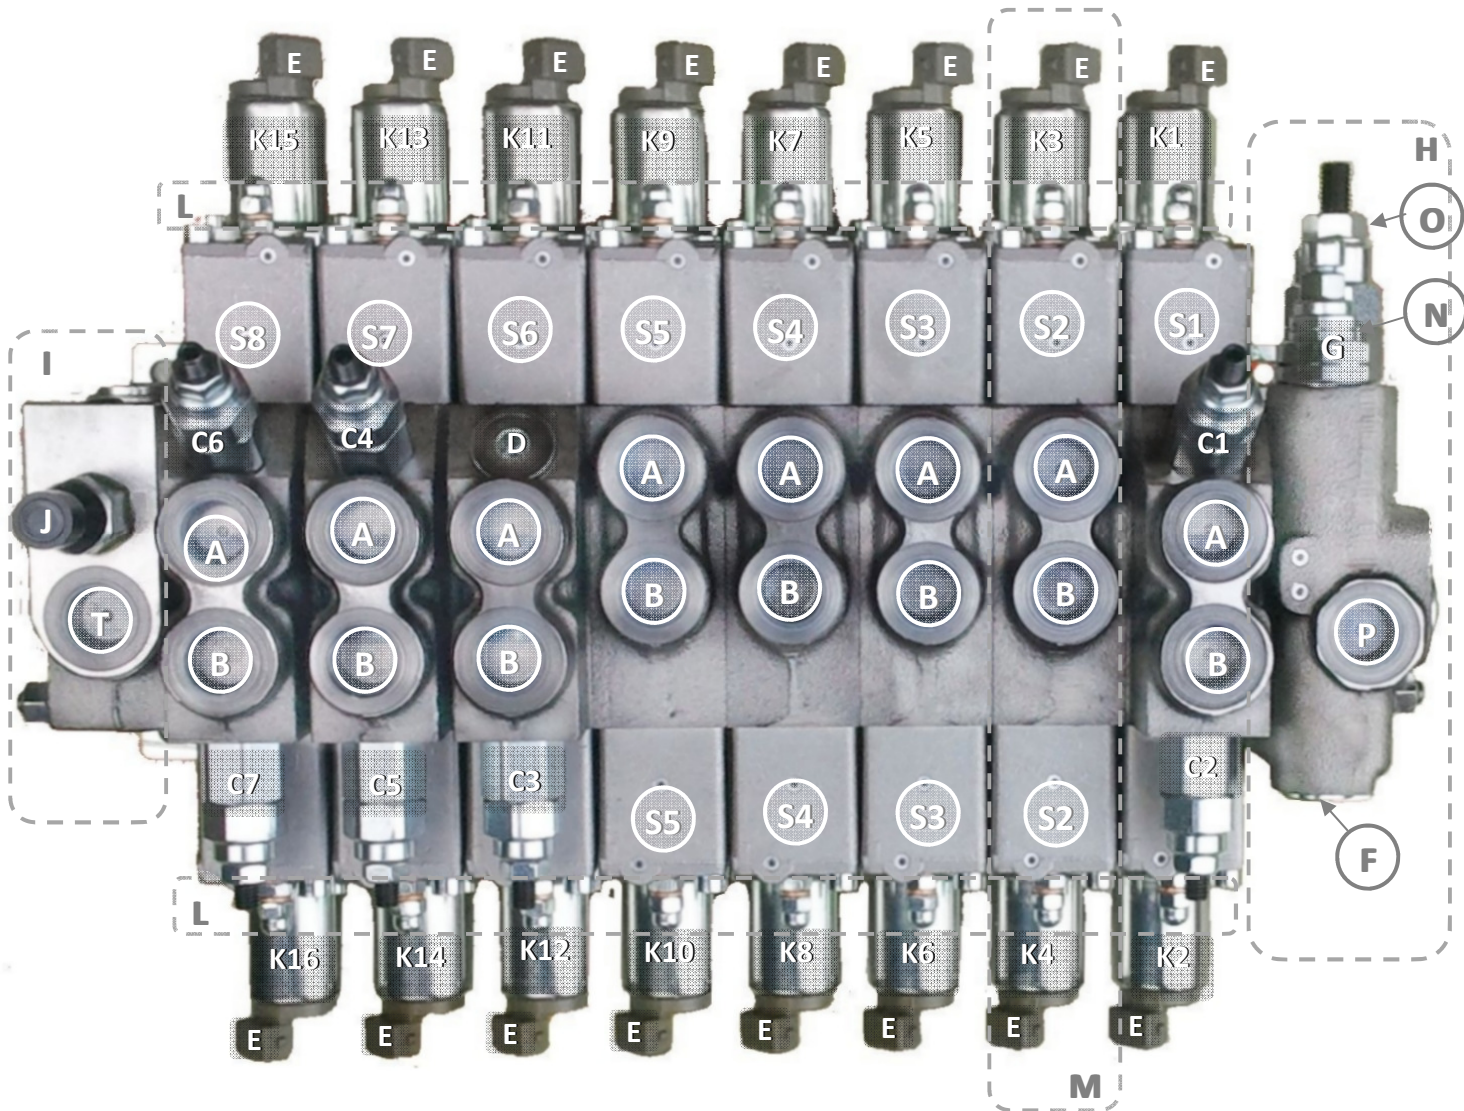

- |   |                                                            |   |                                                              |
|---|------------------------------------------------------------|---|--------------------------------------------------------------|
| A | A-port                                                     | K | Thomas solenoid (K1-K16)                                     |
| B | B-port                                                     | L | Limiting screw for spool movement                            |
| C | Port relief (C1-C7)                                        | M | Section (in this case: section nr 2)                         |
| D | Plug instead of port relief                                | N | Adjusting screw for servo pressure                           |
| E | Thomas solenoid with connector<br>type : Union Power Timer | O | Main relief valve / adjusting screw for<br>main relief valve |
| F | Plug on servo spool                                        | S | Spring cup / section numbers                                 |
| G | Servo cartridge                                            | P | Pump line                                                    |
| H | Pressure inlet                                             | T | Tank line                                                    |
| I | Tank inlet                                                 |   |                                                              |
| J | Protection valve                                           |   |                                                              |



**ROTEC**  
engineering